

LHBC-MH		C1			LEFT HB controls to Main Harness		
CONNECTOR	DTM04-8P						
BOOT	SCL						
NOTES							
Location	Pin/Seal (Part Number)	Wire Size (AWG)	Color	Destinations (End 1, End 2)	Line	Line Description	
1	0460-010-20141	16	BLUE	P1-C1 / HB-1	L1	+12V For High Beam Switch	
2	0460-010-20141	18	GRAY	P2-C1 / J1	L2	+24V For Turn Signal Switches Input	
3	0460-010-20141	16	BLUE / WHITE	P3-C1 / HB-2	L3	+12V Output for HighBeam Relay	
4	0460-010-20141	18	ORANGE	P4-C1 / LT-2	L4	+24V For Left Turn Signal Ref Output	
5	0460-010-20141	18	LIGHT BLUE	P5-C1 / RT-2	L5	+24V For Right Turn Signal Ref Output	
6	0413-204-2005	Plug			PLUG		
7	0413-204-2005	Plug			PLUG		
8	0413-204-2005	Plug			PLUG		
LHBC-ECU		C2			LEFT HB controls to ECU Harness		
CONNECTOR	DTM04-6P						
BOOT	SCL						
NOTES							
Location	Pin/Seal (Part Number)	Wire Size (AWG)	Color	Destinations (End 1, End 2)	Line	Line Description	
1	0413-204-2005	Plug			PLUG		
2	0460-010-20141	18	LIGHT GREEN	P2-C2 / 2STEP-2	L12	2-STEP INPUT	
3	0413-204-2005	Plug			PLUG		
4	0413-204-2005	Plug			PLUG		
5	0460-010-20141	18	WHITE / GREEN	P5-C2 / 2STEP-1	L13	Sensor GND	
6	0413-204-2005	Plug			PLUG		
CLUTCH		C3			Clutch Switch to Main Harness		
CONNECTOR	DTM04-2P						
BOOT	SCL						
NOTES							
Location	Pin/Seal (Part Number)	Wire Size (AWG)	Color	Destinations (End 1, End 2)	Line	Line Description	
1	0460-010-20141	18	BLACK	P1-C3 / J3	L6	Input For Clutch Switch	
2	0460-010-20141	18	BROWN	P2-C3 / J4	L7	Output for Clutch Switch	